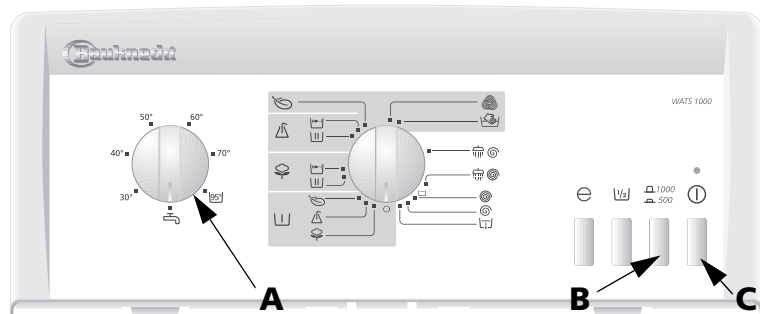


GB WATS 1000



- A. Temperature Selection Knob
 - B. "Spin Speed Reduction" Button
 - C. "On/Off" Button
- "Cold"

* : Option
Yes: dosing required

- 1) Do not use liquid detergents.
- 2) For improved garment care, spin speed is zero in this programme.

Programme	Care Labels	Type of wash / Notes	Max. load kg	Detergents and additives				Special Options			Temperature °C	Max. Spin Speed rpm
				Prewash	Main Wash	Softener	Bleach	Eco	Half Load	Spin Speed Reduction		
Cotton with prewash		Heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.0	Yes ¹⁾	Yes	*	*	*	*	*	Max. 95	1000
Synthetic with prewash		Heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.0	Yes ¹⁾	Yes	*	—	*	*	*	Max. 60	800
Delicate with prewash		Heavily soiled curtains and delicate clothing, dresses, skirts, shirts and blouses.	1.5	Yes ¹⁾	Yes	*	—	—	—	*	Max. 40	800
Cotton		Normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.0	—	Yes	*	*	*	*	*	Max. 95	1000
Cotton short		Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc., made of cotton and linen.	3.0	—	Yes	*	—	—	*	*	Max. 60	1000
Synthetic		Slightly to normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.0	—	Yes	*	—	*	*	*	Max. 60	800
Synthetic short		Slightly soiled overalls and sportswear made of cotton, polyester, polyamide and blends with cotton.	1.5	—	Yes	*	—	—	*	*	Max. 60	800
Delicate		Curtains and delicate clothing, dresses, skirts, shirts and blouses.	1.5	—	Yes	*	—	—	—	*	Max. 40	800
Wool		Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable.	1.0	—	Yes	*	—	—	—	*	Max. 40	800
Handwash		Textiles made of silk, linen, wool and viscose marked as "handwashable".	1.0	—	Yes	*	—	—	—	— ²⁾	Max. 30	— ²⁾
Rinse + Gentle Spin		— Same as the last two rinses and the final spin in the "Synthetic" programme. Programme for treating wash with starch or softener.	2.0	—	—	*	—	—	—	*	—	800
Rinse + Spin		— Same as the last rinse and the final spin in the "Cotton" programme. In this programme spinning is intensive.	5.0	—	—	*	—	—	—	*	—	1000
Spin		— In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.	5.0	—	—	—	—	—	—	*	—	1000
Gentle spin		— In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.	2.0	—	—	—	—	—	—	*	—	800
Drain		— Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".	—	—	—	—	—	—	—	—	—	—

N.B. This machine is controlled by sensors. Please avoid excessive detergent dosing.

CONSUMPTION DATA







Programme	Temperature Selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)
Cotton	95	5.0	63*	1.80	2:05
Cotton	60	5.0	55	0.95	2:05
Cotton	40	5.0	55	0.55	2:05
Synthetic	60	2.0	56	0.80	1:30
Synthetic	40	2.0	56	0.40	1:30
Delicate	40	1.5	60	0.55	0:45
Wool	40	1.0	60	0.50	0:40
Handwash	30	1.0	60	0.30	0:50

Prewash cycle increases programme duration approximately 15 min. Consumption values were measured in normalized conditions in compliance with standard IEC 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

The data on the "Energy Label" refer to the programme "Cotton 60° C".

* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

PREPARATION OF WASH CYCLE

1. Load the machine, close the drum flaps and check that they are properly locked.
2. Add detergents and additives into the dispenser to no more than the "MAX" level mark, as follows:
 - Programme with pre and main wash 
 - Main wash programme without prewash 
 - Fabric softeners and conditioners 
 - Chlorine bleach (4 chamber models only) 
 - Stain remover agents 
 - Anti-scale agents (if necessary) 
3. Turn the **programme selector knob** to the desired programme.
4. Turn the **temperature selector knob** to the desired temperature.
5. Press the **spin speed reduction button**, if desired.

SELECT THE DESIRED OPTION

Selecting or deselecting an option can be done at any time during the programme. The option will be applied as long as the corresponding programme phase has not been executed yet.



"Eco" button

- The duration of the wash is extended and the max temperature reduced to save up to 40% of energy compared to a normal wash but maintaining good washing results.

"Half Load" button


- Can be used for small loads and lightly soiled laundry.
- Reduces the water consumption especially during the rinses.

PROGRAMME START

 
 
Turn on the tap and press the **'On/Off'**  button. The indicator light of the **'On/Off'**  button lights up.

Note If there is a power interruption or if the appliance is disconnected during the cycle, the programme will run again from the point where it was interrupted.

END OF WASH CYCLE

 

- The programme selector knob is in the Stop position "0".
1. Press the **'On/Off'**  button to switch off the machine.
 2. Cancel the options.
 3. Turn the tap off.
 4. Wait for the door to unlock (about 1 minute).
 5. Open the door and the drum flaps and unload the machine.

CHANGE THE PROGRAMME DURING THE WASH CYCLE



 

1. Switch off the machine by pressing the **'On/Off'**  button.
2. Select the new programme.
3. Start programme by pressing the **'On/Off'**  button again.

PAUSE/INTERRUPT A PROGRAMME

If, for any reason, you wish to interrupt the programme for a certain time and continue it later:

1. Press the **'On/Off'**  button.
2. After the desired pause, press again the **'On/Off'**  button.

CANCEL PROGRAMME

1. Switch off the machine by pressing the **'On/Off'**  button.
2. Set the programme selector to "Drain" .
3. Press the **'On/Off'**  button again to start the "Drain"  programme.